

### **Steps to get a ThinkNIC Device to print.**

1. Get the actual TCPIP address or hostname for the printer.
2. Go to NIC Setup Icon on the toolbar of the Browser. (Looks like a cardboard box)
3. Select printer in the form that pops up.
4. Select Network printer and Next
5. Put the IP address in for the host address and the word RAW in for the queue name.
6. Hit Next until the setup is done.

This should allow the printer to print from the local browser.